


NOTES: (UNLESS OTHERWISE SPECIFIED)

1. SEE OH-PL-INTERCONNECT FOR SEPARATE INTERCONNECT PARTS LIST.
2. SEE OH-SPEC-002 FOR ABIS CABLE SPECIFICATIONS.
3. ALL CONDUCTORS SHALL BE STRANDED COPPER 16AWG FOR POWER CONNECTIONS AND 26AWG FOR SIGNAL/DATA CONNECTIONS, EXCEPT AS OTHERWISE SPECIFIED BY OH-SPEC-002. THE APPLICABLE CABLE/ASSEMBLY DRAWING, OR AS OTHERWISE SPECIFIED HEREIN.
4. CABLE COLOR SCHEMES MAY BE ALTERED TO IDENTIFY CONDUCTOR FUNCTION, AS DESIRED; IF AN ALTERNATE CABLE COLOR SCHEME IS USED, DOCUMENT COLOR SCHEME AS APPROPRIATE.
5. TERMINATE ALL UNUSED CONDUCTORS BY FOLDING BACK CONDUCTORS AND HEAT SHRINKING CONDUCTOR ALONG CABLE.
6. INSTALL USB 3.0 PCIE CARD INTO HOST PC. USE MOTHERBOARD-BASED USB PORTS AT OWN RISK.
7. DO NOT INSTALL CONNECTORS FOR UTIL_PHOTO SWITCH PCBs. INSTEAD, CONNECT VIA DIRECTLY-SOLDERED CONDUCTORS TO CONNECTOR LOCATIONS. ENSURE CONDUCTORS WILL NOT INTERFERE WITH ZERO-SENSE WHEEL DURING MOVEMENT.
8. THE POWER SUPPLY USED TO POWER OPENHORNET ELECTRONICS SHALL NOT ALSO BE USED TO POWER THE HOST PC. THE HOST PC SHALL USE A SEPARATE, DEDICATED POWER SUPPLY.

16. REVISION HISTORY			
REV	DESCRIPTION	DATE	APPROVED
-	INITIAL RELEASE	10/06/2023	J. STEENSEN
	UPDATED INTERCONNECT BOM/PL AND GENERAL WIRING NOTES FIXED BOM PRESS GAUGE LED WIRING ADDED WING FOLD SWITCH NOMENCLATURE ADDED WING BUS TERMINATION NOTES ADDED USB 3.0 PCIE CARD NOTE INCREASED R LIP USB CABLE LENGTH FIXED STANDBY INSTRUMENT STEPPER WIRING FIXED PCS SV AND ODV/BPT/CONT CONNECTIONS FIXED ATX PSU BREAKOUT AND ODV/AMPCD NET LABELS FIXED L/F5 ODV AND AMPCD CONTROLLERS (A) NET LABELS	02/28/2024	J. STEENSEN
	FIXED 44144W1 FROM 1589-D1C TO 1689-D1C (#1248) FIXED 2421W1 FROM SHP-OSH-80 TO 10-11-2053 (#1166) FIXED 342AW6 RALT STEPPER HARNESS PIN MAPPING (#1122) ADDED NOTE 8 REQUIRING SEPARATE POWER SUPPLY FOR SH AND HOST PC (#1130) ALL CONSOLES UPDATED BUS MASTER SYMBOLS (#1261) REPLACED ALE WITH ALE+ PCBs (#1261) ADDED SHIELDS ALONG PS4WS ABIS BUS (#1266) LIP: FIXED ABIS-CA-A CABLE REF DESG FROM 441W7 TO 241W5 UPDATED NOTE 3 WITH MORE DETAIL	09/19/2026	J. STEENSEN

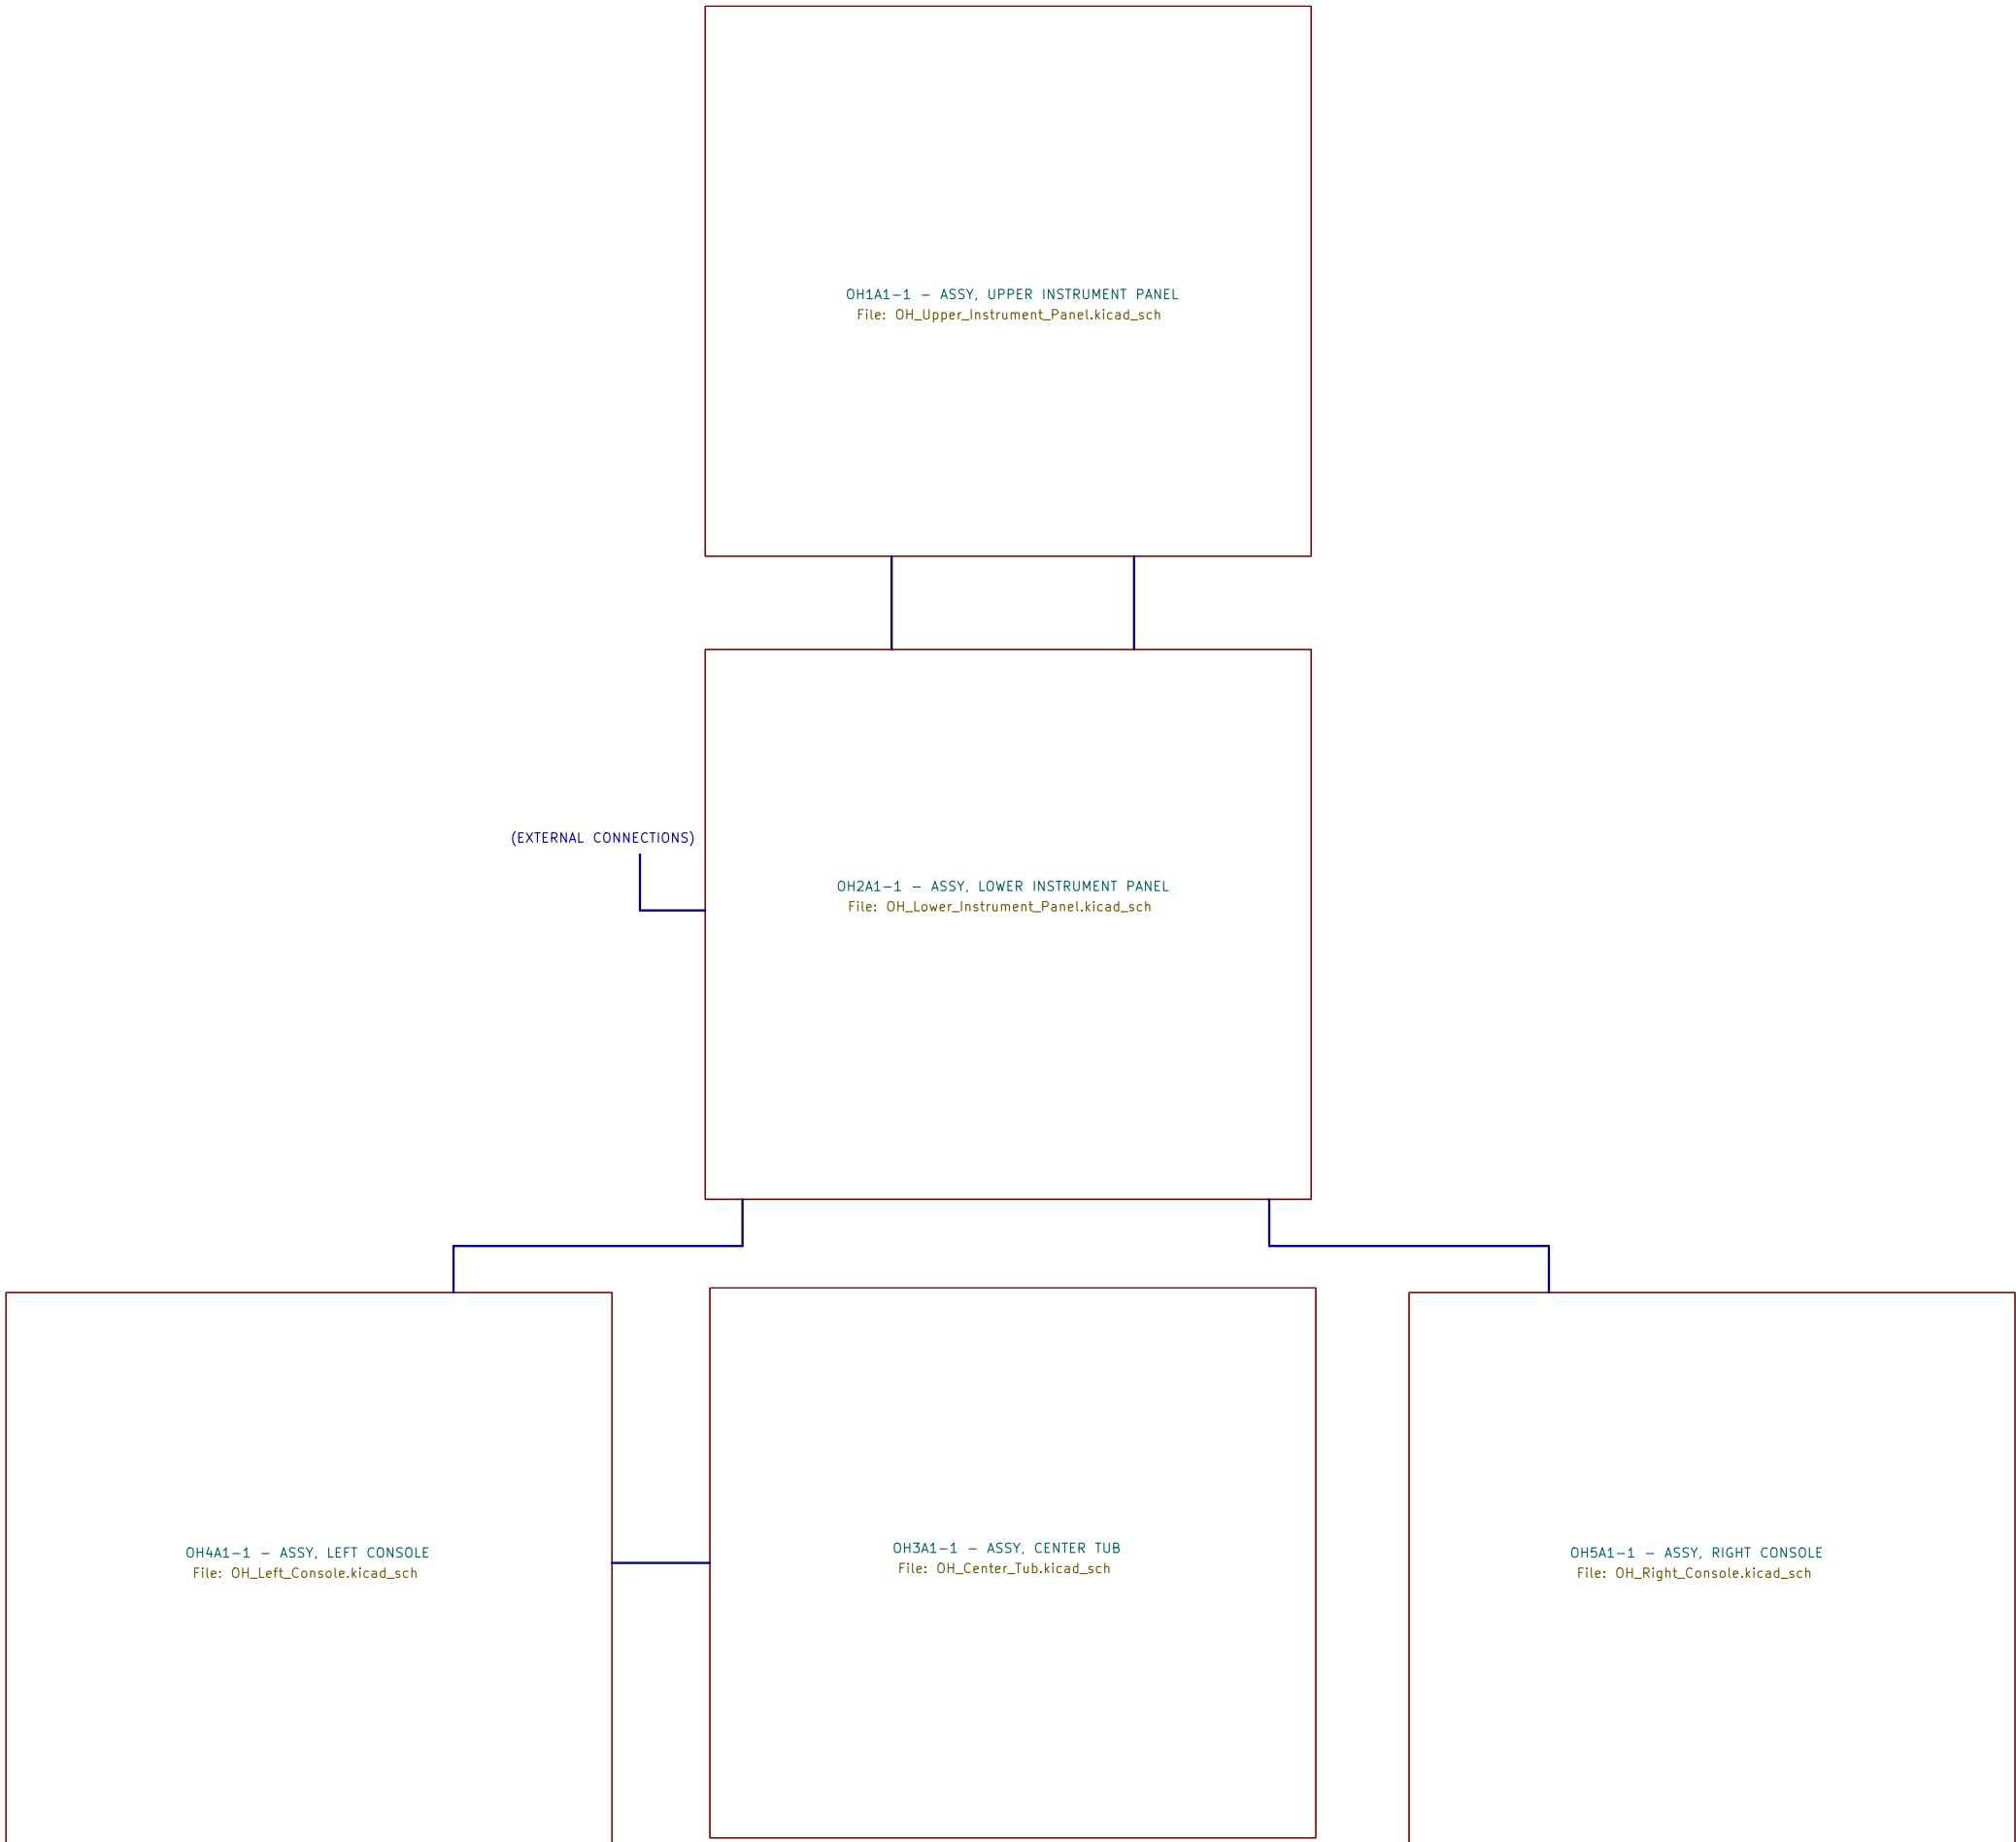


TOP LEVEL SYSTEM
BLOCK DIAGRAM

UNLESS OTHERWISE SPECIFIED:
DIMENSIONS ARE IN INCHES.
DUAL DIMENSIONS ARE IN MILLIMETERS AND ENCLOSED IN SQUARE BRACKETS.
INTERPRET DRAWING IAW ASME Y14.100-2017.
INTERPRET DIM AND TOL IAW ASME Y14.5-2009.
DATE 2026-09-19
DESIGNED J. STEENSEN
CHECKED
DRAWN J. STEENSEN



TITLE
**INTERCONNECT,
OPENHORNET SYSTEM**

SIZE	DWG NO	REV
D	OH-INTERCONNECT	B
SCALE	N/A	DO NOT SCALE DWG
SHEET	1/6	

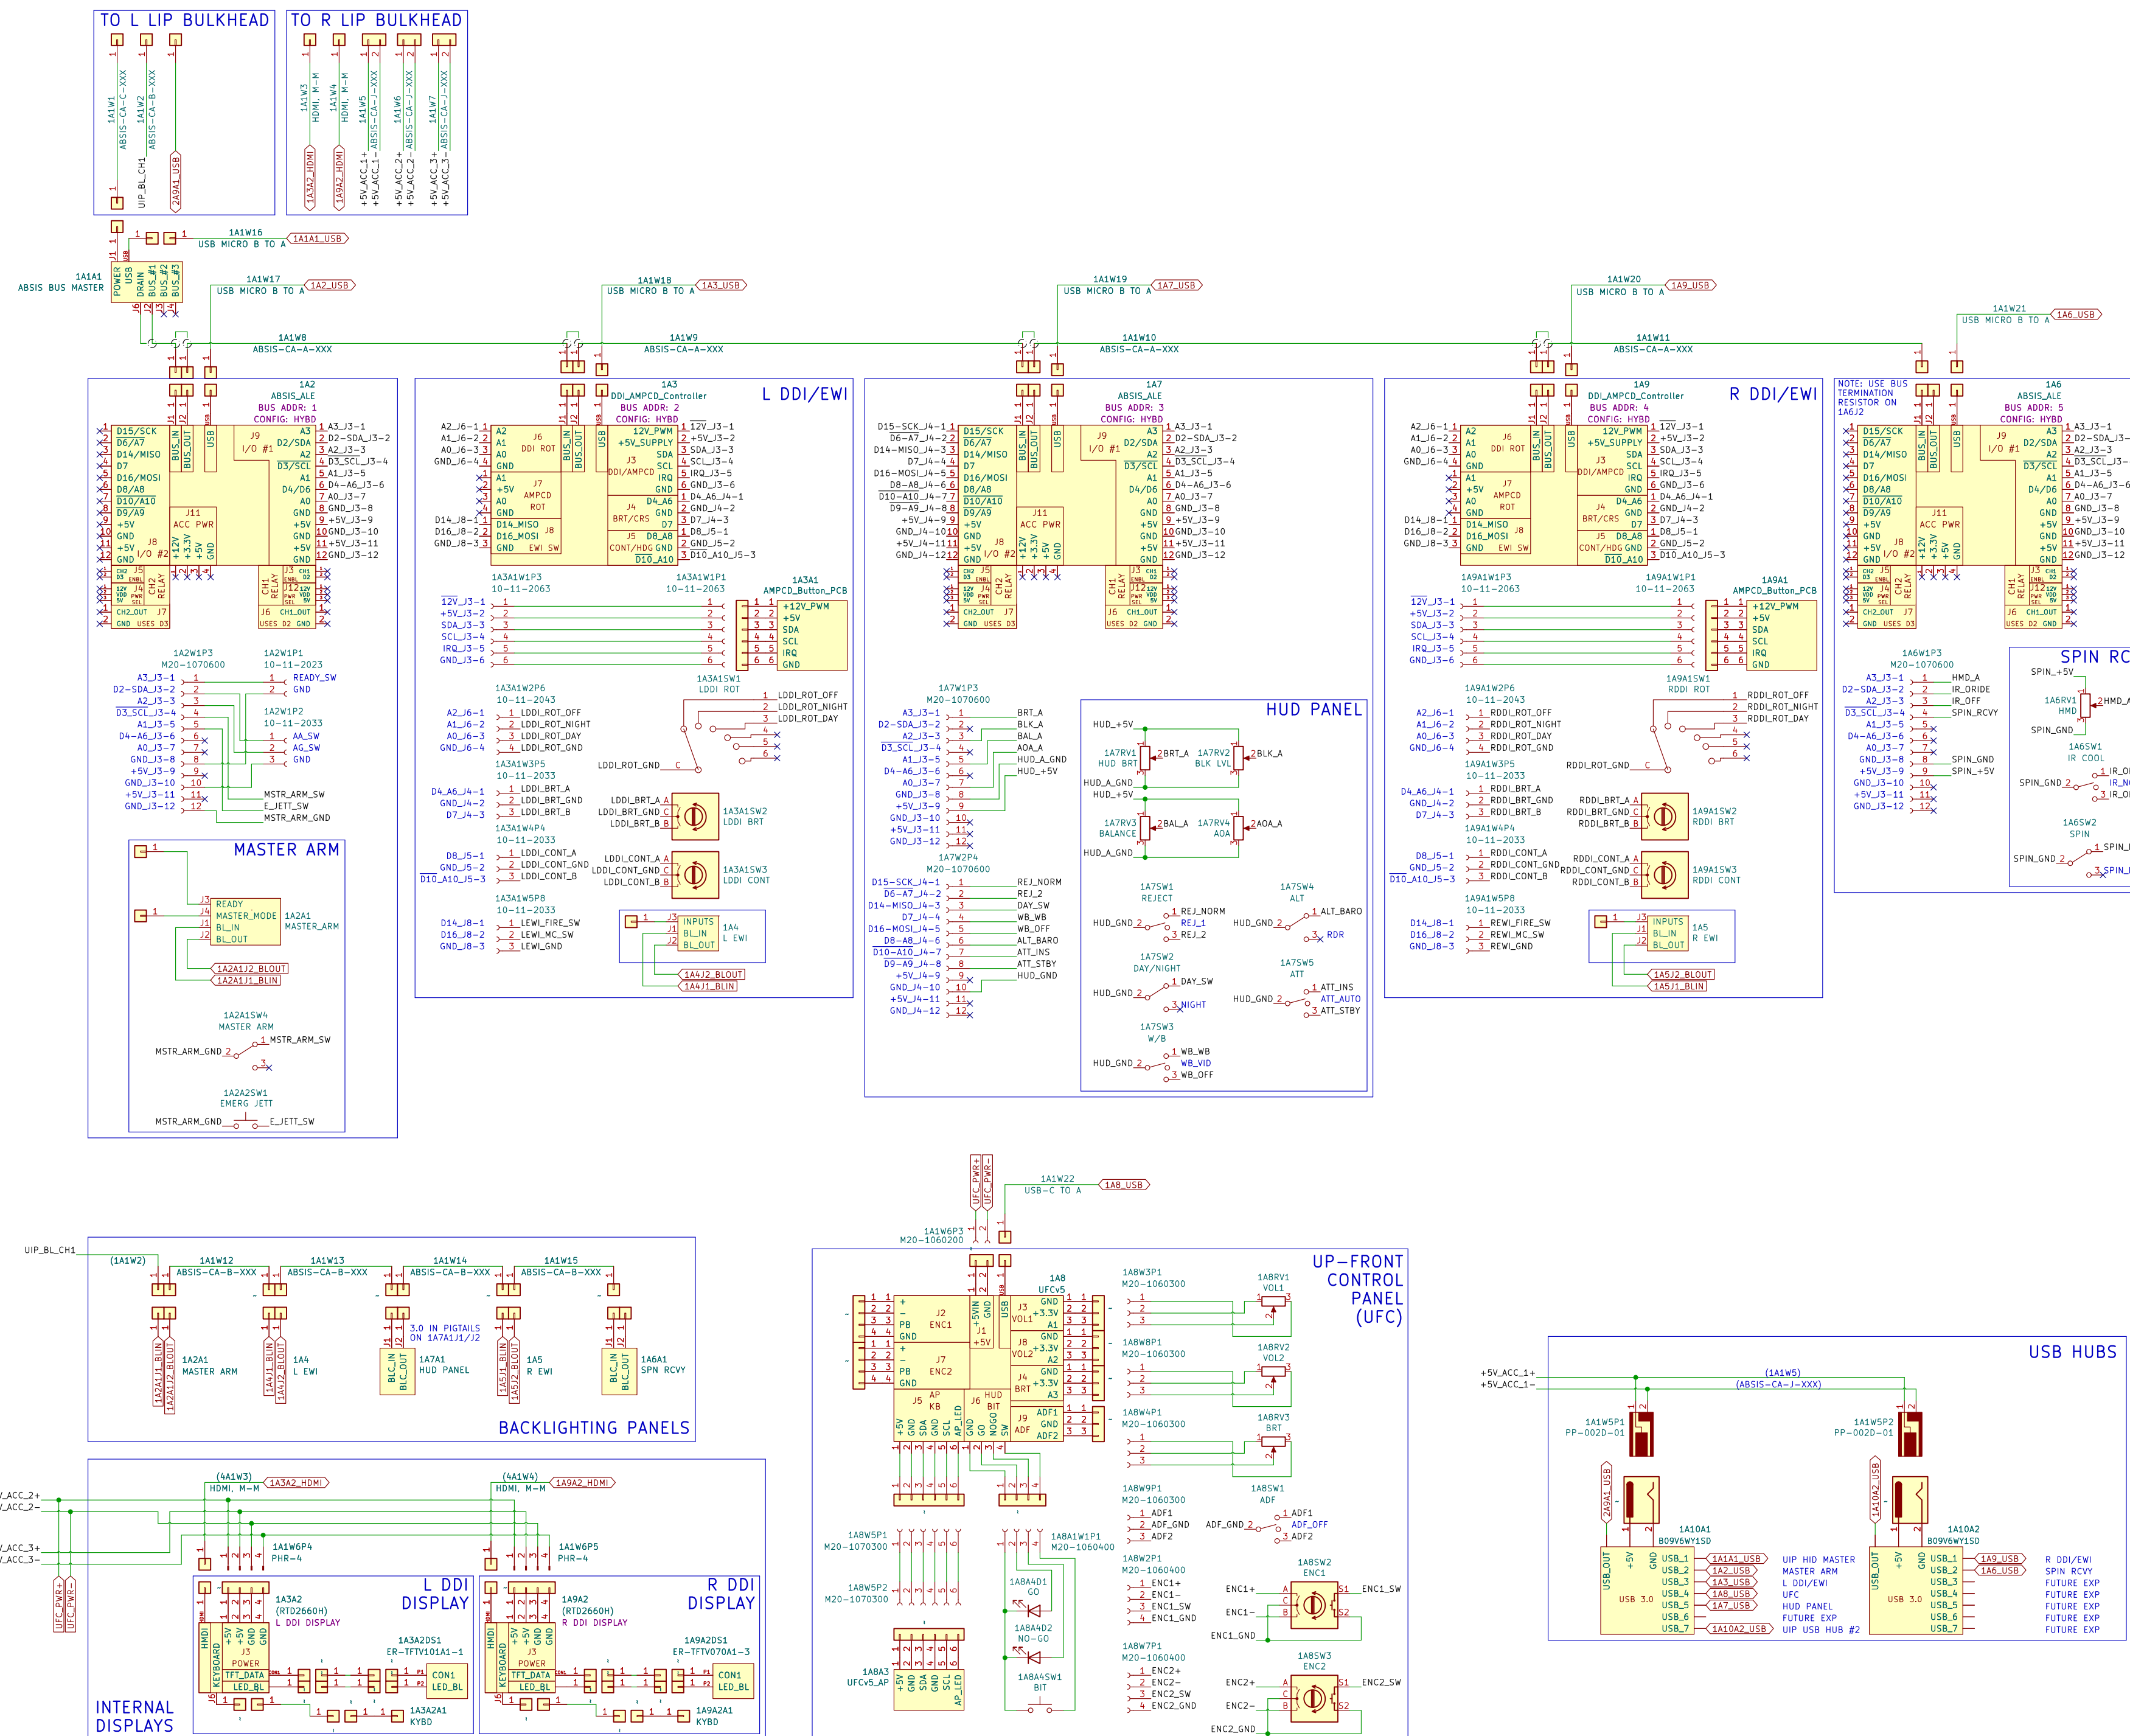

UPPER INSTRUMENT PANEL (UIP)

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES.

DUAL DIMENSIONS ARE IN MILLIMETERS AND
ENCLOSED IN SQUARE BRACKETS.

INTERPRET DRAWING IAW ASME Y14.100-2017.

INTERPRET DIM AND TOL IAW ASME Y14.5-2009.

DATE 2026-09-19

DESIGNED J. STEENSEN

CHECKED

DRAWN J. STEENSEN



OPEN HORNET

<https://www.OpenHornet.com>

TITLE

**INTERCONNECT,
OPENHORNET SYSTEM**

SIZE DWG NO

D OH-INTERCONNECT

SCALE N/A


DO NOT SCALE DWG

SHEET 2/6

TOP LEVEL

REV

B

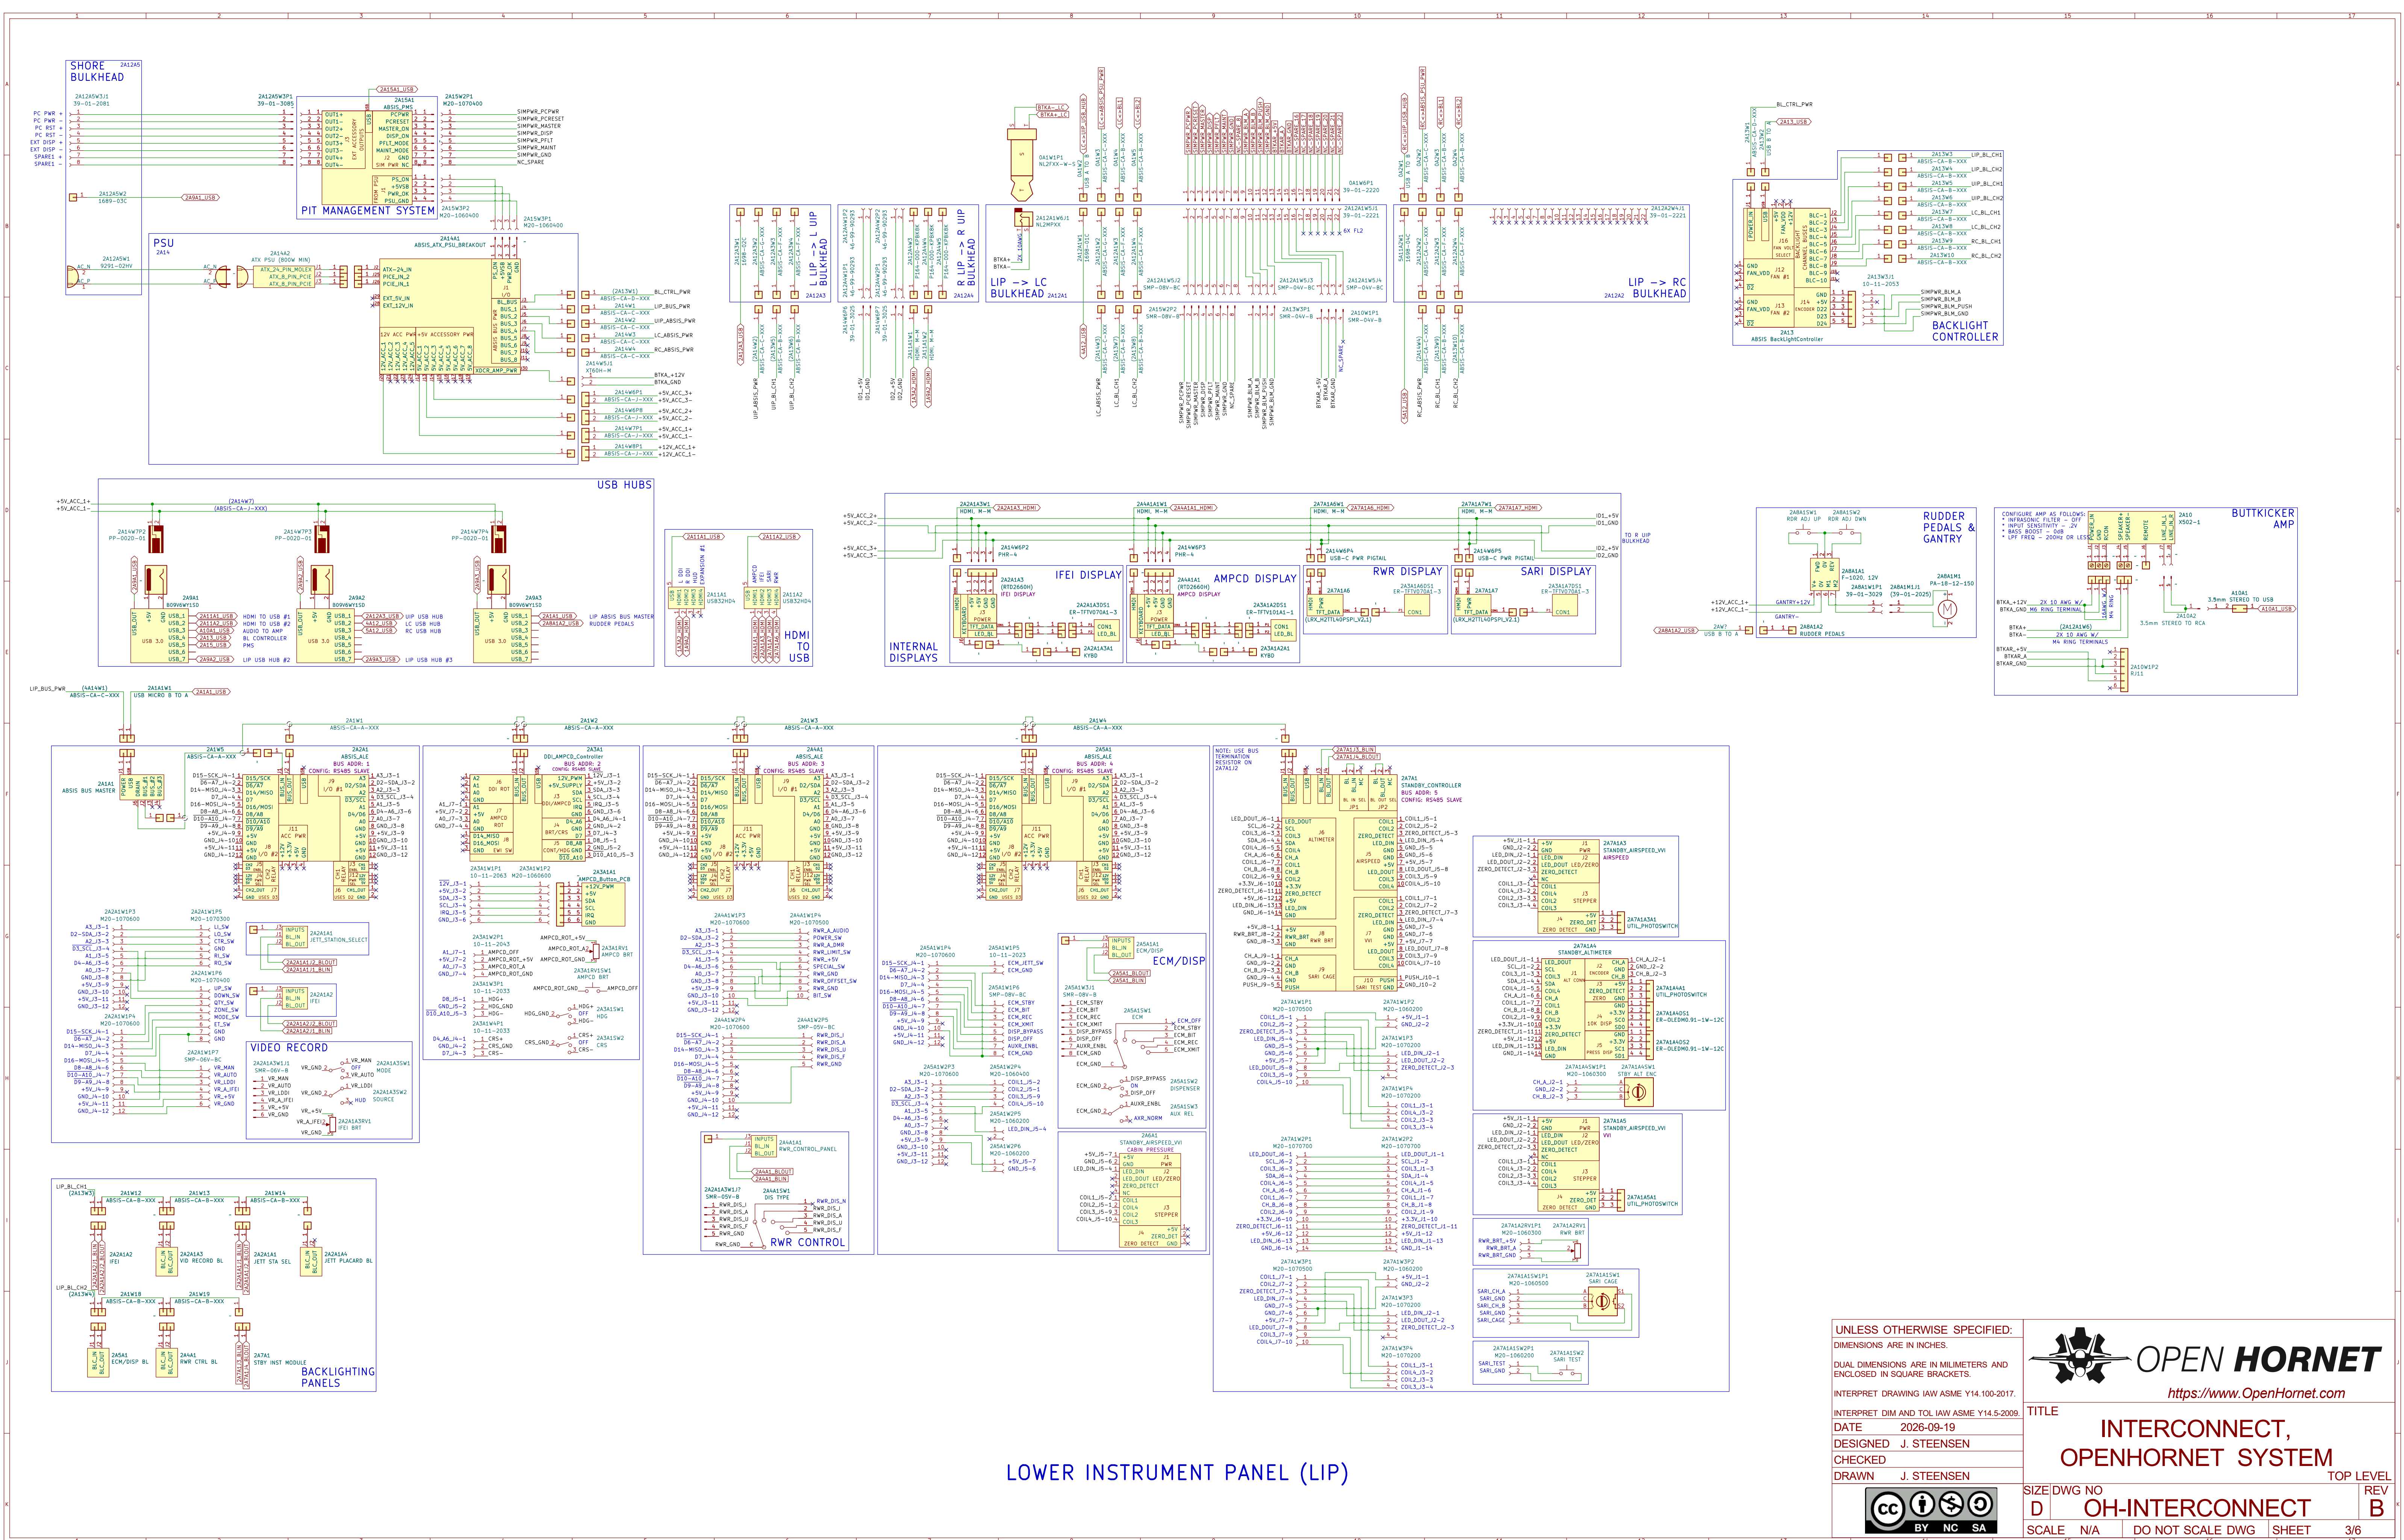

UNLESS OTHERWISE SPECIFIED:

DIMENSIONS ARE IN INCHES.

DUAL DIMENSIONS ARE IN MILLIMETERS AND ENCLOSED IN SQUARE BRACKETS.

INTERPRET DRAWING IAW ASME Y14.100-2017.

INTERPRET DIM AND TOL IAW ASME Y14.5-2009.

DATE 2026-09-19

DESIGNED J. STEENSEN

CHECKED

DRAWN J. STEENSEN



<https://www.OpenHornet.com>

TITLE

INTERCONNECT,
OPENHORNET SYSTEM

SIZE DWG NO

D OH-INTERCONNECT

SCALE N/A

DO NOT SCALE DWG

SHEET 3/6

TOP LEVEL

REV

B

